

## CURRENT TIME SETTING

## HAND FACTORY POSITION ADJUSTMENT



← Button A

← Button B

← Button C

\*\*If you find that the "watch hand" is out of alignment after the adjustment, please complete

"Setting 2",

("Hand Setting Factory Position Adjustment),

and then repeat "Setting 1"

("Basic Adjustment Time Setting").

### Setting 1

#### Minute hand setting:

Press and hold the "B" button for about 3 seconds, the "minute hand" will vibrate as signal, at this moment you can adjust the "minute hand" by A/C button forward or backward to the current time.

#### Hour hand setting:

Press and hold the "B" button for about 3 seconds, the "minute hand" will vibrate as signal, and then press the "B" button repeatedly, the "hour hand" will vibrate as signal, at this moment, you can adjust the "hour hand" by the A/C button forward or backward to the current time.

#### Day of the week setting:

Press and hold the "B" button for about 3 seconds, the "minute hand" will vibrate as signal, then press the "B" button repeatedly until the day of the week hand generates a vibration signal, at this moment, you can adjust the "day of the week" by the A/C button forward or backward to the current day of week.

(Note: The day hand may jump to the next day at noon of the day, so fasten the hour hand for 12 hours)

### Setting 2

Press and hold the "B" key for about 10 seconds, all hands will return to the default position. make sure the hands show the following factory standard:

- "Hour hand" is 12 o'clock
- "Minute hand" is 00 minutes
- "Day hand" is MON
- If it is on the right position, wait 5 seconds for the watch to return to normal time mode.

1. If the above pointer is not in the factory setting position, press the "B" button again for about 10 seconds.
2. The "minute hand" will generate an vibrate signal, at this moment you can use the "A" button or the "C" button to adjust back to the factory setting.
3. After the "minute hand" is adjusted, press the B button again, the "hour hand" will vibrate as signal, and then you can use the "A" button or the "C" button to adjust back to the factory square.
4. After the "hour hand" is adjusted, press the "B" button again and again, the "day hand" will vibrate as signal, then you can use the "A" button or the "C" button to adjust back to the factory square.
5. After completing the above action, you can return to setting 1 and set the time to local time to finish.