

## CURRENT TIME SETTING



### Setting 1:

1. Press and hold the "B" button for about 3 seconds, the "minute hand" will vibrate signal.
2. After the "minute hand" vibrates, you can use button "A" or button "B" to adjust the time moving forward or backward. When the time is set to the local time, the setting is finish.

\*\*If you find that the "watch hand" is out of alignment after the adjustment, please complete "Setting 2", ("Hand Setting Factory Position Adjustment), and then repeat "Setting 1" ("Basic Adjustment Time Setting").

## HAND FACTORY POSITION ADJUSTMENT

### Setting 2

Press and hold the "A" and "B" keys for about 10 seconds, all the hands will return to the default position. make sure the hands show the following factory standard:

- "hour hand" is 12
- "minute hand" is 00 minutes
- If it is on the right point, please wait for 5 seconds to let the watch return to the normal time mode.

1. If the above hands are not in the factory set position, press the "A" key and "B" key again for about 10 seconds.
2. When all the hands stop running, the "minute hand" will vibrate, use the "A" or "B" button to set the "minute hand" to 00 minutes.
3. When the "minute hand" has been adjusted, press the A and B buttons again and the "hour hand" will vibrate. Use the "A" or "B" button to set the "hour hand" to 12.
4. After finishing the above action, please wait for 5 seconds to let the watch return to normal time mode. Please go back to the setting 1 "Basic Timing Settings" and set the current time again to finish.