


CURRENT TIME SETTING

HAND FACTORY POSITION ADJUSTMENT

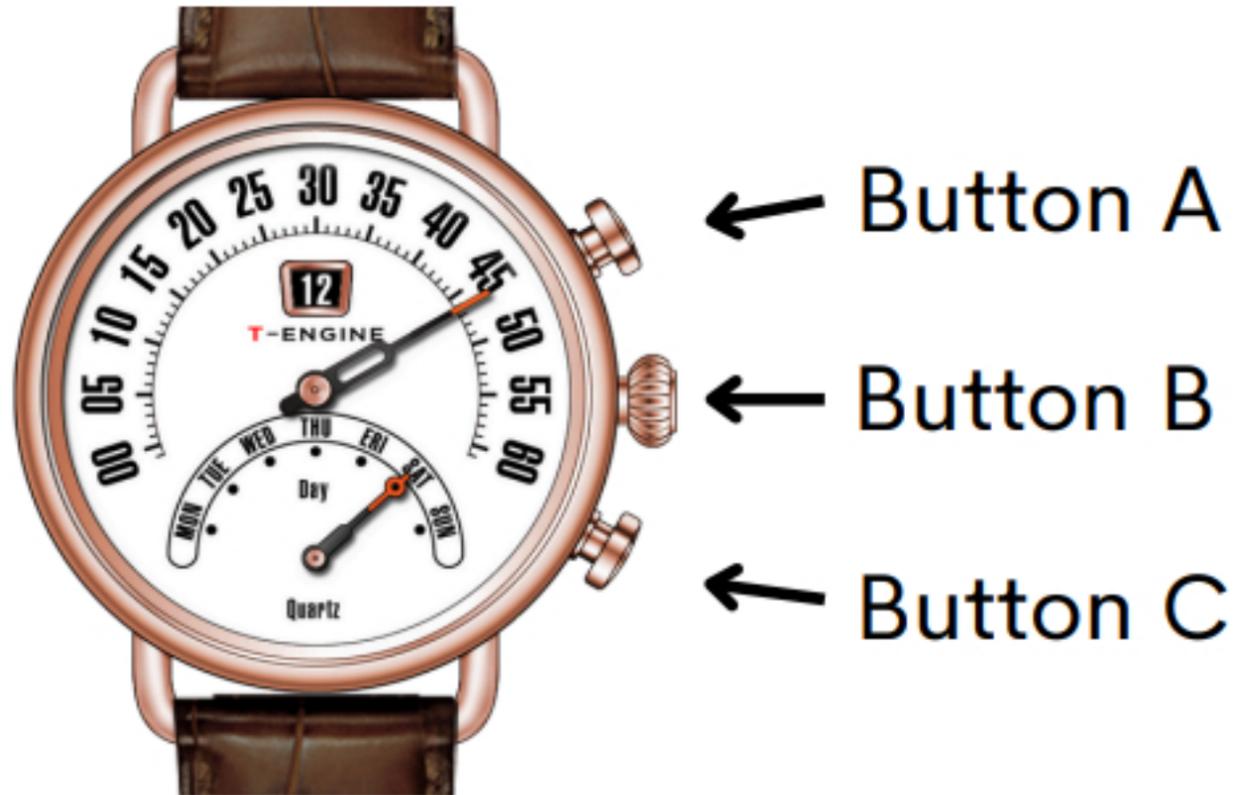

Setting 1:

Minute hand setting:

Please press and hold the "B" button for about 3 seconds, the "minute hand" will generate vibrate as signal, at this moment, you can adjust the "minute hand" by the A/C button forward or backward to the current time.

Hour hand setting:

Please press and hold the "B" button for about 3 seconds, the "minute hand" will generate vibrate as signal, then press the "B" button again quickly, the "hour hand" will generate vibrate as signal, at this moment, you can adjust the "Hour hand" by pressing the "A/C" button to adjust the hand forward or backward to the current time.

Week setting:

Please press and hold the "B" button for about 3 seconds, the "minute hand" will generate vibrate as signal, then press the B button repeatedly until the day of the week hand generates a vibration signal, at this moment, you can adjust the "Week" by pressing the A/C button to adjust the hand forward or backward to the current week.

(Note: The day of the week hand may jump from one day to the next at noon, in this case, please fasten the hour hand for another 12 hours).

**If you find that the "watch hand" is out of alignment after the adjustment, please complete "Setting 2", ("Hand Setting Factory Position Adjustment), and then repeat "Setting 1" ("Basic Adjustment Time Setting").

Setting 2

Press and hold the "B" button for about 10 seconds and all hands will return to the default position of the movement. Make sure the hands show the following factory standard:

- "minute hand" is 30 .
- "Hour hand" is 12 .
- "week" is THU.
- If it is on point, wait 5 seconds for the watch to return to normal time mode.

1. If the above hands are not in the factory setting, press the "B" button again for about 10 seconds.
2. The "minute hand" will generate vibrate as signal. At this point, you can use the "A" button or "C" button to adjust the factory setting to "30".
3. "After the minute hand has been adjusted, press the B button repeatedly, the hour hand will generate vibrate as signal, and you can use the A button or C button to adjust the factory setting to "12".
4. After the "Hour Hand" is adjusted, press the "B" button again, the "Day Hand" will generate a vibrating signal, and you can use the A button or C button to adjust the factory setting to "THU".
5. After completing the above actions, you can go back to Setup 1 and set the time to the local time.